 




(封底)

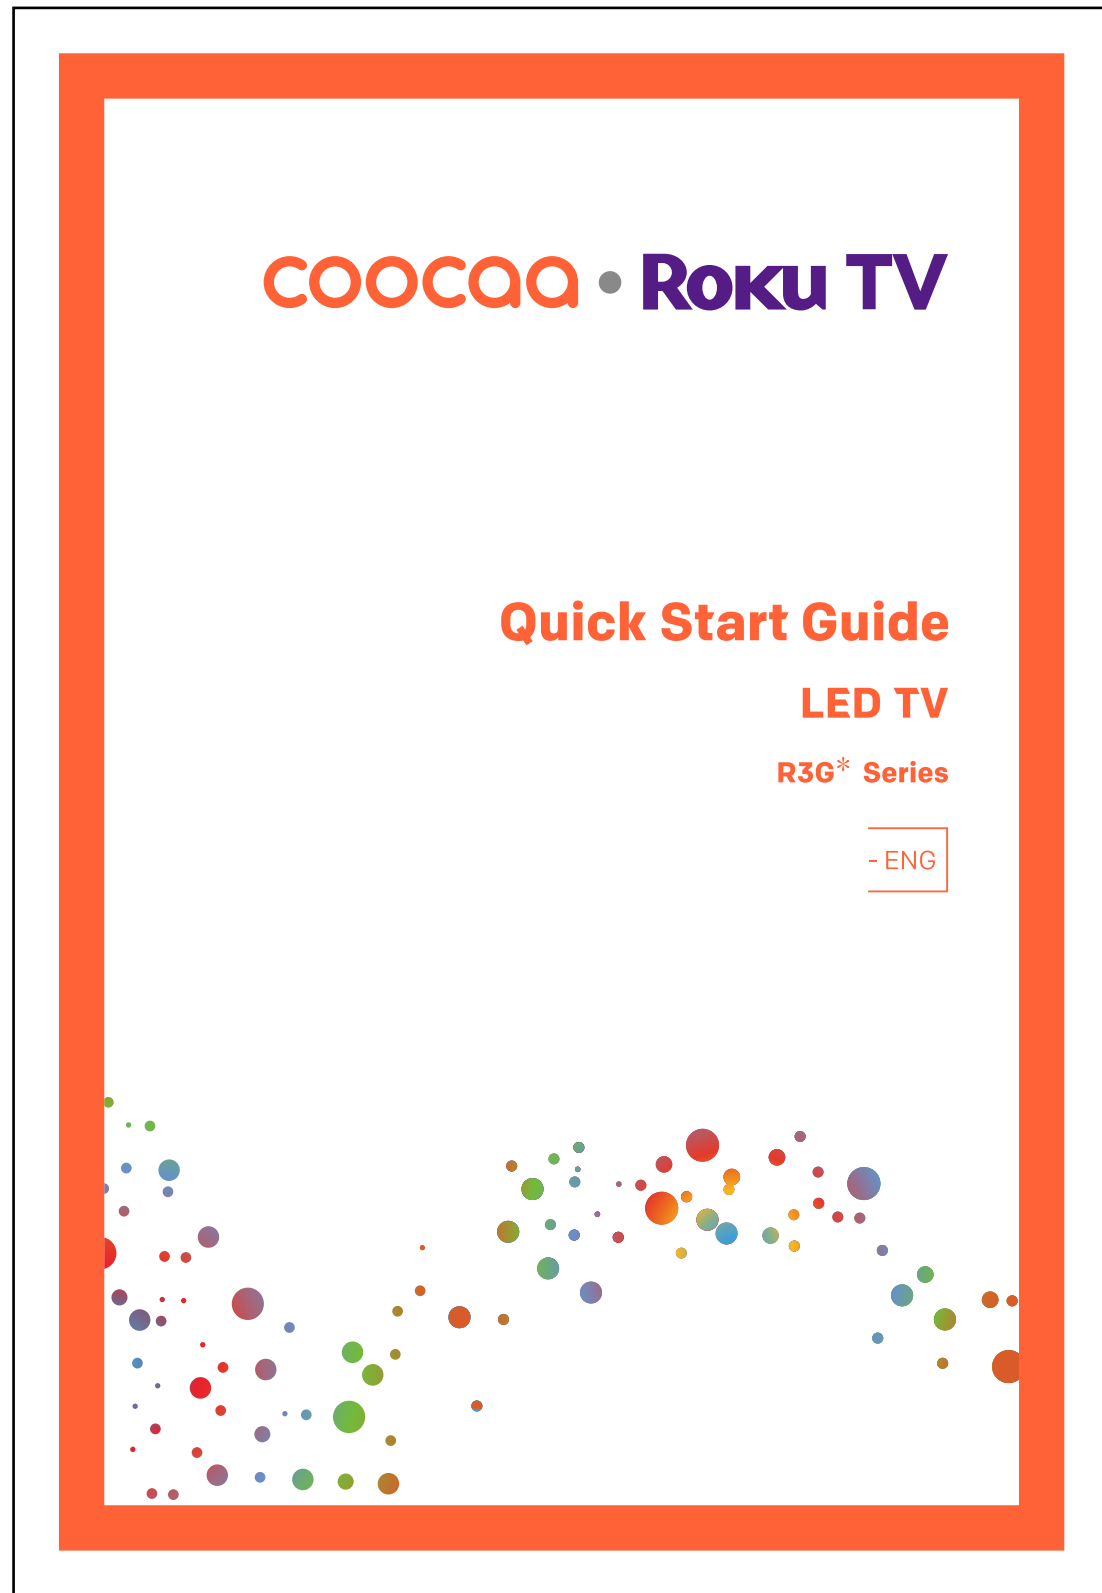

(封面)

请打样确认效果后再量产！请先送样！！

颜色要求:

Roku TV



CMYK:  
80 100 0 0



PANTONE  
2026 C

外观质量要求:

- 1.图文清晰、无残缺、无乱码、颜色准确，内容与文档一致。
- 2.尺寸正确，符合公差要求；表面清洁无刮花、无破损；不掉色、无透印，边缘切割整齐等。

Appearance and quality Requirements:

- 1.Contents should be clearly printed without defects or garbled characters. Contents and colors should be consistent with the drawing.
- 2.Size should be correct and conform to the tolerance requirements. The edges should be cut neatly, and the surface should be clean without scratches, damages, fading or printing through.

技术要求:

- 1.封面封底120g铜版纸彩色印刷，表面过哑膜；内页80G双胶纸，黑白印刷。
  - 2.尺寸:A5(148X210mm),尺寸公差(0/-3)。
  - 3.装订:页数≤80P时,骑马钉装订,页数>80P时胶装。
  - 4.彩色封面纸张250克以下过PE膜；250克及以上过UV。
  - 5.环保:符合RoHS、Reach和TSCA最新标准。
  - 6.多语种排序:英语在前,德语在后。
- Technical requirements:  
1.Material: 120g coated paper on the front and back cover, printed in color, with a matte film on the surface; 80G double-adhesive paper on the inner page, printed in black and white.  
2.Size: A5 (148 X 210 mm) with a tolerance of (0/-3) mm.  
3.If there are more than 80 pages, user manual is bound with glue. If not more than 80 pages, it is bound with staples.  
4.On the color cover, add PE film if less than 250g paper is used, and add UV film if not less than 250g.  
5.Meet the latest standards of RoHS, Reach and TSCA.  
6. Multilingual sorting: English first, German last.

深圳创维-RGB电子有限公司


SHENZHEN CHUANGWEI-RGB ELECTRONICS CO., LTD.

物料名称(TITLE)	快速操作指南	品牌名称(BRAND NAME)	coocaa
产品型号(MODEL)	32WG6-J816G 40WG6-J817G	销售型号(SALES MODEL)	R3G*Series
视角(PROJECTION)		物料编号(PART NO.)	Y010801-000705-003
单位(UNITS)	mm	绘制/日期(DWN./DATE)	刘剑凤 2022-12
比例(SCALE)	1:1	校核/日期(CHK./DATE)	
版本号(VERSION NO.)	V1	批准/日期(APP./DATE)	


# PREPARATION

 Note: The pictures are only for reference.


## Unpacking and Installation

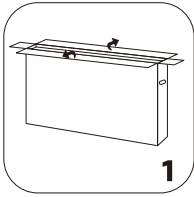


Open the package.

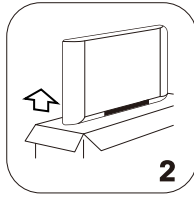 

Take out the TV.

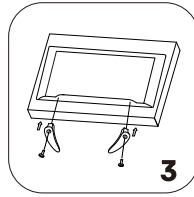 


Install the TV stands.

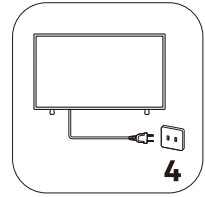 

Connect the power cord.


## Standard Accessories

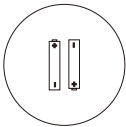 


2 Batteries



 
Remote Control

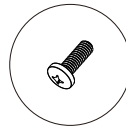


4 Screws

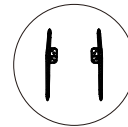 

2 Base Stands

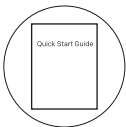 

Quick Start Guide

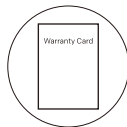 



Warranty Card

## Stand Installation

  **Step 1:** Take out the TV and carefully put it (screen downward) on a stable and flat table with a soft cloth or cushion on it.

**Step 2:** Please check to make sure there are the same mark (L/R) on the TV back and the correct stand. This step is not available for the stands without any mark on it, or not available for the TV with one stand only.


**Step 3:** Fix the stands to the TV by fastening the matching screws provided in the box. The stands may vary depending on the region or model.

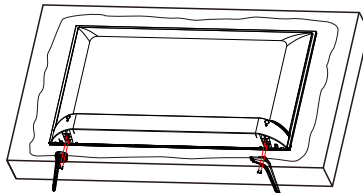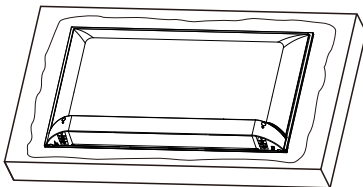


# WARNING AND PRECAUTION

Read all of the instructions before operating the set. Keep these instructions for later use.

## Important Safety Instructions


- Read these instructions – All the safety and operating instructions should be read before this product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions – All operating and use instructions should be followed.
- Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as direct sunlight, radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
-  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- Please refer the information on rear enclosure for electrical and safety information before installing or operating the apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. Do not use the set near dust place.

- For the terminals marked with symbol of “⚡” may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by an instructed person or the use of ready-made leads or cords.
- To prevent injury, use the stand/wall-mount bracket to securely install this apparatus on the table/wall in accordance with the installation instructions.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss. Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.
- When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges and the like that can cause abrasion of the power cord set. When put into use again, please make sure the power cord set being not damaged, If any damages found, please look for the service person to replace the power cord set specified by the manufacturer or have the same characteristics as the original one.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus. To prevent the spread of fire, keep candles or other open flames away from the apparatus at all times.
- If the apparatus have the symbol  in its rating label and the power cord has two pins, it means that the equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.(Only for Class II appliance)

- Warning for Apparatus containing COIN/BUTTON CELL BATTERIES (Below instruction only used for the apparatus containing a user-replaceable coin/button cell battery)

**WARNING:**







Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

-  This lightning flash with arrowhead symbol within an equilateral triangle is Intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

To reduce the risk of electric shock. Do not remove cover (or back). No user serviceable parts inside. Refer to qualified service personnel.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

- The following information are recommended to be included as far as applicable where applicable:

	Refer to alternating current(AC).		Refer to stand-by or power on.
	Refer to direct current(DC).		Refer to power on.
	Refer to ClassII equipment.		Refer to dangerous voltage.

 
## WEEE Directive



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## Positioning the TV

- Install Display on solid horizontal surface such as a table or desk. For ventilation, leave a space of at least 10cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set. This apparatus can be used in tropical and/or moderate climates.
- Fix the rear of enclosure to wall (only for some countries)
- Warning: Stability Hazard

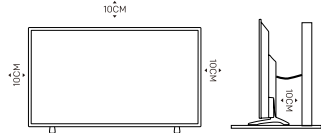

*Note: The picture is only for reference.*



A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is being retained and relocated, the same considerations as above should be applied.


## Mounting on a Wall

  - An optional wall mount can be used with your television. Consult with your local dealer to purchase the recommended wall mount bracket. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. Please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices.
- To prevent product damages or personal injuries, please make sure that the TV screen is kept upright, or tilted upward or downward within the angle range of 0°~5° while mounting the TV onto the wall.
- In case of exceeding the above angle range (0°~5°) of tilting downward, please purchase the auxiliary accessories from the local dealer to mount the TV for safe installation and usage. Otherwise, it will not be covered by the warranty and the user should be liable for all consequences and responsibilities.

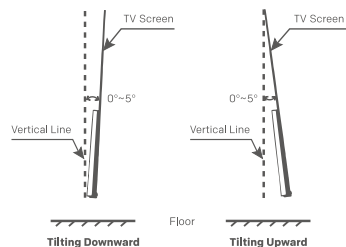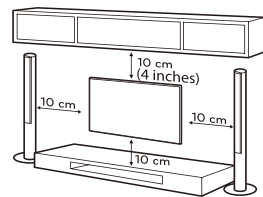

*Note: The picture is only for reference.*

 - Disconnect the power before moving or installing the TV. Otherwise electric shock may occur.
- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorized wall mount and contact the local dealer or qualified personnel. Otherwise it is not covered by the warranty.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty.
- To prevent injury, this apparatus must be securely attached to the wall in accordance with the installation instructions.
- Use the screws and wall mounts that meet the following specifications. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.

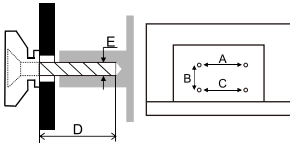

Model Size		32"		40"	
		Top	Down	Top	Down
Screw	Diameter(mm) "E"	M4	M4	M6	M6
	Depth(mm) "D"	Max	10	10	10
		Min	8	8	8
	Quantity	2	2	2	2
A*B*C		200*100*200		200*200*200	

**Note:**

1. The pictures are only for reference.
2. For the TV sets with terminals towards the wall, in order to leave enough space to use the terminals, a plastic spacer is needed together with each screw to fix the wall mount. It is a small hollow pillar, the height of which is  $\geq 30\text{mm}$ .

## Precautions For Using Remote Control

- Use the remote control by pointing it towards the remote sensor. The items between the remote control and the remote sensor will interfere the normal operation.
- Do not make remote control vibrate violently. Also, do not splash liquid on the remote control, also do not put the remote control in high humidity place.
- Do not place remote control under direct sunlight which will cause deformation of the unit by heat.
- When the remote sensor is under direct sunlight or strong lighting, the remote control will not work. If so please change the lighting or TV's position, or operate the remote control closer to the remote sensor.

 
## Precautions For Using Battery

Improper using of the battery will cause leakage. So please do as the following methods and use carefully.

1. Please note the batteries' polarity, to avoid short circuit.
2. When the battery's voltage is insufficient which affect the use range, you should replace new battery. Remove the batteries from the remote control unit if you do not intend to use it for a long time.
3. Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
4. Do not put the battery into fire, and charge or decompose the battery.
5. Please dispose of batteries in compliance with relevant environmental protection regulations.
6. **WARNING:** The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## Install Remote Control Batteries

Place two AAA size batteries in the remote control's battery compartment, making sure to match the polarity markings inside the compartment.



*Note: The picture is only for reference.*

## **Taking back old appliances (Germany: Take-back obligation of distributors)**

Distributors with a sales area for electrical and electronic equipment of at least 400 square metres and distributors of foodstuffs with a total sales area of at least 800 square metres who offer and make available on the market electrical and electronic equipment several times in a calendar year or on a permanent basis are obliged to take back free of charge an old appliance of the end user of the same type of equipment when handing over a new electrical or electronic appliance to an end user. This means that if you buy a new TV set from a specialised or grocery retailer with the above-mentioned minimum area and product range, you can return your old TV set free of charge. In the case of delivery of the new appliance by such a specialist or food retailer to a private household, the retailer is obliged to collect an old appliance of the same type free of charge.

For mail-order companies, there is an obligation for some types of appliances (heat exchangers, large appliances and display screen equipment, i.e. also for TV sets) to collect an WEEE of the same type free of charge from a private household upon purchase and delivery of a new appliance, if all storage and dispatch areas for EEE of a mail-order company for EEE amount to at least 400 square metres or If storage and dispatch areas of at least 800 square metres are available at a mail-order company of foodstuffs that offers EEE several times per calendar year or permanently and makes it available on the market. For more detailed information on taking back old appliances, please ask the respective retailer.

## **Deleting personal data or restoring factory settings**

To prevent third parties from accessing any personal data stored on the old TV set after it has been disposed of, we recommend that you initialise the old TV sets to be disposed of to the factory settings.

# TERMINAL CONNECTION

*Note:*

- 1). The pictures are only for references.
- 2). Terminal quantities and names may vary depending on the region or model.
- 3). External equipments and cables shown herein are not supplied with the TV.
- 4). **"RESET"** button can be used to restart the TV, or by the service engineer to update the TV software system through a USB device.

<b>Terminal Connection</b>	<b>Description</b>
ANTENNA IN	Connect a coaxial cable to receive signals from the antenna, cable or satellite.
AV IN	Connect audio and video signal from signal source such as DVD.
USB	USB port.
HDMI	Connect HDMI input signal from signal source such as DVD.
DIGITAL AUDIO OUT	Use a coaxial (or an optical) cable to output your TV audio signal to a compatible audio receiver.
CI	CI card port.
LAN	Wired network port.

 


# REMOTE CONTROL

**Note:**

1). The picture is only for reference.

2). The image, buttons and functions of remote control may vary depending on the region, model or source.

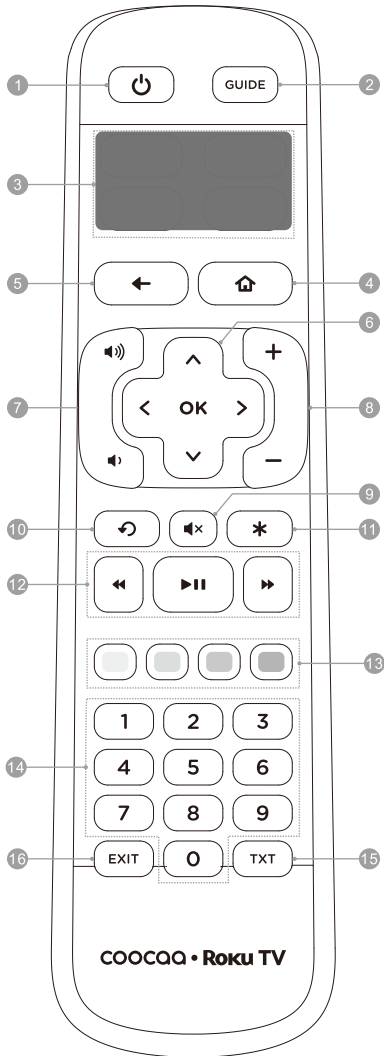

## 1. POWER ( ⏻ ):

\* Use the Power button to turn on or turn off the TV.

\* TV will be in active standby for about 15 minutes after a Power button press to turn off the TV. The TV will enter passive standby after this time. On a Power button press to turn on the TV, the TV will resume instantly if in active standby or will take few seconds longer if in passive standby.

**2. GUIDE:** Access the Electronic Program Guide.

**3. Application Buttons:** Access specific applications quickly and directly.

**4. HOME ( 🏠 ):** Access the home screen.

**5. BACK ( ← ):** Go back to the previous menu or screen.

**6. Navigation Buttons ( ^ / v / < / > )**

Navigate the menu to select the content you need.

**7. Volume Up/Down ( 🔊 / 🔊 ):** Adjust the sound volume.

**8. Channel Up/Down ( + / - ):** Switch channels.

**9. MUTE ( 🔇 ):** Mute or restore the TV sound.

**10. RETURN:** Return back to the previously-viewed channel.

**11. STAR ( \* ):** Access the menu of TV settings, or access the menu of additional options in a specific screen.

**12. \*\*\*Media Player Control Buttons\*\*\***

• **PLAY/PAUSE ( ▶️⏸️ ):** Start/Pause the playback.

Pause up to 90 minutes of live TV when you connect a 16GB or larger USB to your TV.

• **Fast Backward ( ⏪️ ):** Fast backward the playback.

• **Fast Forward ( ⏩️ ):** Fast forward the playback.

**13. Color Buttons (RED/GREEN/YELLOW/BLUE):**

Execute the prompt function in specific mode.

**14. Number Buttons (0~9):**

Select a channel directly, or input a number.

**15. TXT:** Access the Teletext menu.

**16. EXIT:** Exit the current screen or operation.

# BASIC OPERATION

## Turn on or turn off the TV

1. Connect the power cord to the TV and wall outlet.
2. In standby mode, press **POWER** button on the remote control to turn on the TV.
3. In working status, press **POWER** button on the remote control to turn off the TV.
4. If you want to power off the TV completely, please pull out the power cord from the wall outlet.

## TV Control Button

### ■ In standby mode:

 
Short press TV control button to turn on the TV.

### ■ In working status:


\* Short press TV control button and the TV will be in active standby for about 15 minutes. The TV will enter passive standby after this time. On a Power button press to turn on the TV, the TV will resume instantly if in active standby or will take few seconds longer if in passive standby.

\* Long press TV control button to open the Inputs menu.

- **Close:** Exit the Inputs menu.
- **Turn off TV:** Turn the TV to standby mode.
- **Blu-ray Player:** Access the external device connected through HDMI or AV terminal.
- **Live TV:** Access the Live TV mode.
- **Home:** Access the home screen.

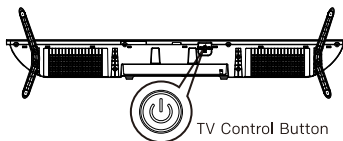

TV Control Button

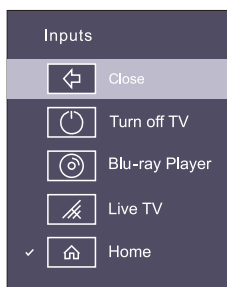 

*Note: The pictures are only for reference.*

## Initial Setup

The first time you turn on the TV, a setup wizard will appear on the screen to guide you through all settings in Initial Setup.

**Step 1:** Select the menu language.

**Step 2:** Setup the TV usage environment. If you need to demonstrate the TV in a store, please select "Setup for store use", which will consume more energy. If you need to use the TV at home, please select "Setup for home use".

**Step 3:** Select whether or not to connect the TV to the wired or wireless network.

\* If you don't want to connect the TV to the network in this step, please skip directly to **Step 4**.

\* If you have connected the TV to the wireless or wired network, you may be asked to select your time zone, and the TV may automatically check for updates.

### <Activate your smart TV>

After the TV is successfully connected to the network, you will see the activation screen with detailed instructions telling you how to activate your smart TV using your computer, smartphone or tablet to link to a Roku account. You need a Roku account to activate your Roku TV and access the entertainment across thousands of free and paid streaming channels. Roku doesn't charge for activation support - beware of scams. Roku accounts are free and while a valid credit card number is not required to create a Roku account, saving your credit card information makes renting and purchasing entertainment from the Roku channel store fast and convenient.

**Step 4:** Connect your device to the TV through HDMI or AV terminal.

**Step 5:** Select a name for the connected device.

**Step 6:** Initial setup is completed.

### Note:

1) Settings in Initial Setup may vary depending on the region or model. Please refer to the actual on-screen instructions.

2) If you want to restart the Initial Setup after the first time, please select <**HOME** → Settings → System → Advanced system settings → Factory reset → Factory reset everything>.

# TROUBLE SHOOTING

Before calling a service technician, please check the following table for a possible cause of the symptom and some solutions.

## General Problem/Solution

- **Remote control does not work**  
Change the batteries.  
Check if batteries are installed correctly.  
Check if main power is connected.  
Check if there are some items between remote sensor and remote control.
- **Poor Signal**  
This is usually caused by interference from electronic equipments or radio interference sources.

## Picture & Sound/Solution

- **No picture, no sound**  
Check the signal source.  
Plug another electrical device into the outlet to check if it is working or turned on.  
Check if power plug is in good contact with the outlet.  
**No sound, picture OK**
- If no sound, unmute the sound or increase the volume.  
Open the sound menu and adjust 'Balance'.  
**Abnormal picture**  
For no color or bad picture quality, you may:
  1. Adjust the color option in menu settings.
  2. Keep the TV at a sufficient distance from other electronic products.
  3. Try another channel.**Bad TV signal (Display mosaic or snowflakes)**
  1. Check the signal cable and adjust the antenna.
  2. Fine tune the channel.
  3. Try another channel.

## Multimedia Player/Solution

- **'This file is invalid'/'Unsupported audio' appears , or audio is normal but video is abnormal, or video is normal but audio is abnormal**  
The media file maybe damaged, check if the file can be played on the PC.
- Check if video and audio codec is supported.

## Network/Solution

- **Network failure**  
Check if the router works well.  
Make sure the TV has connected to the router successfully.

# SPECIFICATION

<b>Working voltage:</b>	100-240V~ 50/60 Hz
<b>Dimensions without stand (W X H X D):</b>	32": 720.0 X 423.4 X 77.5 mm 40": 892.4 X 506.8 X 80.4 mm
<b>Net weight without stand:</b>	32": 3.7 kg 40": 5.2 kg
<b>RF aerial input:</b>	75 ohm unbalanced
<b>Language of OSD:</b>	Multiple options
<b>System:</b>	DTV: DVB - T/T2/S/S2/C
<b>Channel coverage:</b>	DVB-T/T2: VHF (42 MHz ~ 230 MHz) UHF (474 MHz ~ 862MHz) DVB-S/S2: 900 MHz ~ 2200 MHz DVB-C: 114 MHz ~ 858 MHz
<b>Environment (only for Tropical climates zone):</b>	Working temperature: 5°C~40°C Working humidity: 20%~80% Storage temperature: -15°C~50°C Storage humidity: 10%~90%
<b>Environment (only for Moderate climates zone):</b>	Working temperature: 5°C~40°C Working humidity: 20%~80% Storage temperature: -15°C~45°C Storage humidity: 10%~90%

## LICENSE



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. or DTS Licensing Limited. DTS, DTS Studio Sound, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

## Roku TV


Roku, Roku TV and the Roku logos are the trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.

**Note:**

1. Design and specifications are subject to change without notice.
2. In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the TV as you will.

# RADIO MODULE

Note: Hereby, [Shenzhen Chuangwei-RGB Electronics Co., Ltd.] declares that the radio equipment type [R3G\* Series] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.coocaa.eu](http://www.coocaa.eu).

Radio Module Specifications																																	
Wireless Network(WLAN)																																	
Frequency Band	Transmitting Power(Max.)																																
<p><b>2.4G:</b> 2412~2472 MHz</p> <p><b>5G:</b> Band I: 5180~5240 MHz Band II: 5260~5320 MHz Band III: 5500~5700 MHz</p>	<20dBm																																
<p>Remark:</p> <p>1). The device should be positioned or operated at least 20cm away from the user.</p> <p>2). Due to various sales regions, the wireless module may have different configurations which will not exceed the maximum described in this manual.</p> <p>3). Restrictions or Requirements in following countries: Indoor use only within 5150-5350MHz.</p>																																	
	<table border="1"> <tr> <td>FR</td> <td>DE</td> <td>UK</td> <td>IT</td> <td>NL</td> <td>BE</td> <td>LU</td> <td>TR</td> </tr> <tr> <td>DK</td> <td>IE</td> <td>GR</td> <td>ES</td> <td>PT</td> <td>AT</td> <td>FI</td> <td>LI</td> </tr> <tr> <td>SE</td> <td>CY</td> <td>MT</td> <td>PL</td> <td>HU</td> <td>CZ</td> <td>SK</td> <td>IS</td> </tr> <tr> <td>SI</td> <td>EE</td> <td>LV</td> <td>LT</td> <td>BG</td> <td>RO</td> <td>HR</td> <td>NO</td> </tr> </table>	FR	DE	UK	IT	NL	BE	LU	TR	DK	IE	GR	ES	PT	AT	FI	LI	SE	CY	MT	PL	HU	CZ	SK	IS	SI	EE	LV	LT	BG	RO	HR	NO
	FR	DE	UK	IT	NL	BE	LU	TR																									
	DK	IE	GR	ES	PT	AT	FI	LI																									
	SE	CY	MT	PL	HU	CZ	SK	IS																									
SI	EE	LV	LT	BG	RO	HR	NO																										