




(封底)

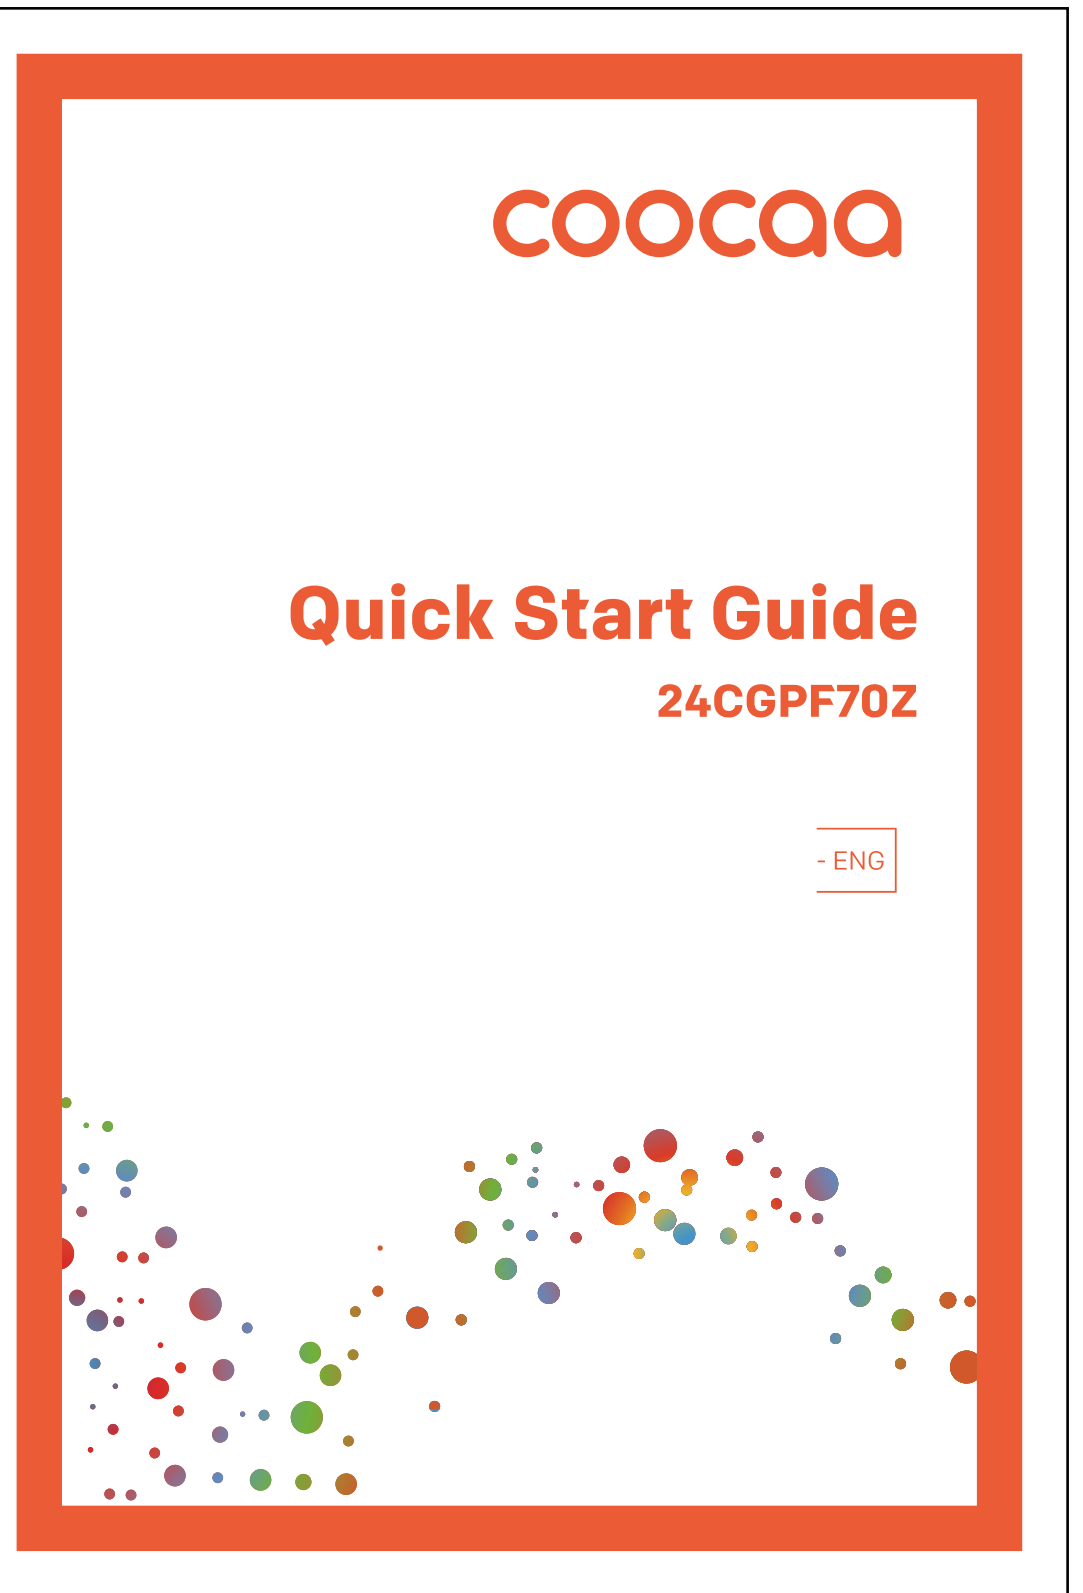

(封面)

颜色要求:



**PANTONE
2026 C**

外观质量要求:

1. 图文清晰、无残缺、无乱码、颜色准确，内容与文档一致。
2. 尺寸正确，符合公差要求；表面清洁无刮花、无破损；不掉色、无透印，边缘切割整齐等。

Appearance and quality Requirements:

1. Contents should be clearly printed without defects or garbled characters. Contents and colors should be consistent with the drawing.
2. Size should be correct and conform to the tolerance requirements. The edges should be cut neatly, and the surface should be clean without scratches, damages, fading or printing through.

技术要求:

1. 封面封底120g铜版纸彩色印刷，表面过哑膜；内页80G双胶纸，黑白印刷。
2. 尺寸:A5(148X210mm),尺寸公差(0/-3)。
3. 装订:页数≤80P时,骑马订装订,页数>80P时胶装。
4. 彩色封面纸张250克以下过PE膜;250克及以上过UV。
5. 环保:符合RoHS、Reach和TSCA最新标准。
6. 多语种排序: 英语在前, 德语在后。

Technical requirements:

1. Material: 120g coated paper on the front and back cover, printed in color, with a matte film on the surface; 80G double-adhesive paper on the inner page, printed in black and white.
2. Size: A5 (148 X 210 mm) with a tolerance of (0/-3) mm.
3. If there are more than 80 pages, user manual is bound with glue. If not more than 80 pages, it is bound with staples.
4. On the color cover, add PE film if less than 250g paper is used, and add UV film if not less than 250g.
5. Meet the latest standards of RoHS, Reach and TSCA.
6. Multilingual sorting: English first, German last.


深圳创维-RGB电子有限公司
SHENZHEN CHUANGWEI-RGB ELECTRONICS CO., LTD.

物料名称(TITLE)	快速操作指南	品牌名称(BRAND NAME)	coocaa
产品型号(MODEL)	AK07G24P2E	销售型号(SALES MODEL)	24CGPF70Z
视角(PROJECTION)		物料编号(PART NO.)	Y010801-000885-002
单位(UNITS)	mm	绘制/日期(DWN./DATE)	刘剑凤 20204-03
比例(SCALE)	1:1	校核/日期(CHK./DATE)	
版本号(VERSION NO.)	V1_20240408	批准/日期(APP./DATE)	


PREPARATION

Note: The pictures are only for reference.


Unpacking

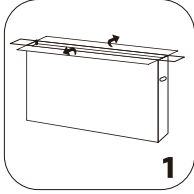

Open the package.

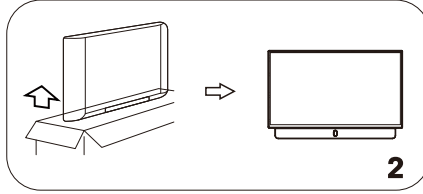


Take out the device and put it on a flat surface.

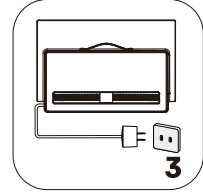


Connect the power cord.

This is a Portable TV with built-in lithium-ion battery, you can choose to connect the power cord or use the device's battery. To keep the battery in optimal condition, drain it completely when using it for the first time, then fully charge it.


Accessories

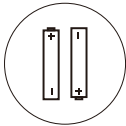


Batteries/2

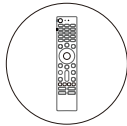


Remote Control

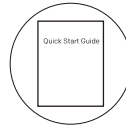

Quick Start Guide

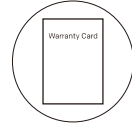

Warranty Card

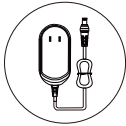

Adapter

Note:


1. The information in this document is subject to change without notice. COOCAA accepts no liability for damage resulting directly or indirectly from faults, incompleteness or discrepancies between the user manual and the product described.


2. In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the device as you will.

WARNING AND PRECAUTION

Read all of the instructions before operating the set.

Important Safety Instructions

- Read these instructions - All the safety and operating instructions should be read before this device is operated.
- Keep these instructions - The safety and operating instructions should be retained for future reference.
- Heed all warnings - All warnings on the device and in the operating instructions should be adhered to. Follow all instructions - All operating and use instructions should be followed.
- For safety reasons, do not place this device near a pool or a basement with wet flooring.
- Clean only with dry cloth.
- Do not block any ventilation openings. Use in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as direct sunlight, radiators, heat registers, stoves, or (including amplifiers) that produces heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plug, convenience receptacles, and at the point where they exit from the device. Only use attachments and accessories specified by the manufacturer.
-  Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the device. When a cart or rack is used, use caution when moving the device/Cart combination to avoid an injury from a tip-over.
- Unplug the device during lightning storms or when unused for long periods of time. Refer all servicing to qualified personnel. Servicing is required when the device has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Do not install this device in a confined or building space such as a book case or restrictive airflow space. The device's ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- Please refer the information on rear enclosure for electrical and safety information before installing or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture.
- The device shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the device. Do not use the device near dusty places.

- For the terminals marked with symbol of "⚡" may be of sufficient level of voltage to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by a professional or the use of ready-made leads or cords.
- Danger of fire if the remote control battery is incorrectly replaced. Replace only with the same or equivalent type.
- The remote control battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- During moving this device, it is suggested to remove the power cord to avoid damaging it. It is also recommended to inspect the power cord periodically to ensure that it is not damaged.
- Attention should be drawn to environmental aspects of battery disposal.
- Avoid exposing the device to direct flame sources such as candles or anything that burns. Keep candles or any open flames away from the device at all times.
- If the device has the symbol  in its rating label and the power cord has two pins, this means that the equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical ground.
- Warning for any device containing COIN / BUTTON CELL BATTERIES (Below instruction only used for the device containing a user-replaceable coin/button cell battery)







WARNING:

Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- To reduce the risk of electric shock. Do not remove cover (or back). No user serviceable parts inside. Refer to qualified service personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
- The following information are recommended to be included as far as applicable where applicable:

 Refer to alternating current(AC).	 Refer to stand-by.
 Refer to direct current(DC).	 Refer to power ON.
 Refer to ClassII equipment.	 Refer to dangerous voltage.

WEEE Directive



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Warning

- Warning: Stability Hazard

A device set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use furniture that can safely support the device set.
- ALWAYS ensure the device set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the device set or its controls.
- ALWAYS route cords and cables connected to your device so they cannot be tripped over, pulled or grabbed.
- NEVER place a device set in an unstable location.
- NEVER place the device set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the device set to a suitable support.
- NEVER place the device set on cloth or other materials that may be located between the device set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the device or furniture on which the device is placed.

If the existing device set is being retained and relocated, the same considerations as above should be applied.

Precautions For Using Remote Control

- Avoid placing the remote on surfaces that vibrate and near water or high humidity
- Do not place remote control under direct sunlight which will cause deformation of the unit by heat.
- The device's Power On may be affected when the device's remote sensor is under direct sunlight.


Precautions For Using Batteries

Improper use of the battery will cause leakage. So please follow these instructions and use carefully.

1. Please note the batteries' polarity, to avoid damage.
2. When the battery's voltage is weak it loses its operational, you should replace new battery. Remove the batteries from the remote unit if you do not intend to use the device or remote control for a long period of time.
3. Do not use different types of batteries (for example, non-alkaline and Alkaline batteries) together.
4. Do not put the battery into fire, or attempt to charge the battery.
5. Please dispose batteries according to the local environmental protection regulation.
6. WARNING: The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Install Remote Control Batteries

Place two AAA size batteries in the remote control's battery compartment, making sure to match the polarity markings inside the compartment.

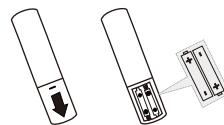


Note: The picture is only for reference.

TERMINAL CONNECTION


• USB

 Connect a USB storage device.



• HDMI

 Receive a digital input signal from HDMI devices such as DVD, BluRay Player, Media Player, or Set Top Box.



• DIGITAL AUDIO OUT

Use an optical cable to output your device's audio signal to a compatible digital audio receiver.



 
• LAN

Wired network port.



• AV IN

Receive audio and video signals from AV devices such as DVD.



• DC IN

 
Power input.



Note: jack connection size: 5.5x2.5mm

• ANTENNA IN

Connect a coaxial cable to receive signals from the antenna, cable or satellite.



• CI

CI card port.




Note:

- 1). The pictures are only for references.
- 2). Terminal quantities and names may vary depending on the region or model.
- 3). External equipments and cables shown herein are not supplied with the device.

REMOTE CONTROL

Note:

- 1). The picture is only for reference.
- 2). The image, buttons and functions of remote control may vary depending on the region or model.

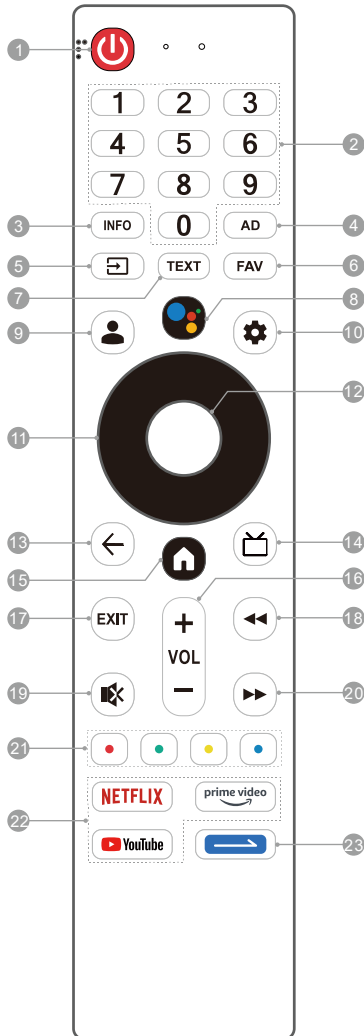

1. POWER (⏻): Turn the TV on or to standby mode.

2. Number Buttons (0~9):

Select the channel directly, or input a number.

3. INFO: Access the INFO interface.

4. AD: Turn on or turn off the function of audio description.

5. SOURCE (☰): Access the source menu.

6. FAV: Access the list of favorite channels.

7. TEXT: Access or exit the teletext menu.

8. MIC (🎤): Start using the near field voice function.

- Short press MIC button to wake up the voice assistant.

- Long press MIC button to start receiving your voice command. After your speaking, release MIC button to run voice function.

9. ACCOUNT (👤): Sign in with your Google account to get the entertainment you love.

10. Dashboard (⚙️): Access the dashboard of your Google TV.

11. UP/DOWN/LEFT/RIGHT

Navigate the menu to select the content you need, or

- Press UP/DOWN button to change channel.

12. OK: Confirm, enter or execute the selected item, or access the channel list.

13. BACK (←): Return to upper-level content, or exit the current screen.

14. GUIDE (📺): Access the Electronic Program Guide.

15. HOME (🏠): Access the home screen.

16. Volume Up/Down (VOL +/-): Adjust the sound volume.

17. EXIT: Exit the current operation.

18. Fast Backward (⏮): Fast backward the playback in media player.

19. MUTE (🔇): Mute or restore the device sound.

20. Fast Forward (⏭): Fast forward the playback in media player.

21. Color Buttons (RED/GREEN/YELLOW/BLUE):

Execute the prompt function in specific mode.

22. Application Buttons: Access specific applications quickly and directly.

23. Daily Key (👉):

- Short press to start the shortcut function, or setup it for the first time.


- Long press to setup the shortcut function.

BASIC OPERATION

E-Manual

E-Manual is built into your device and can be displayed on the screen. To learn more about your device's features, access your E-Manual by referring to the following.



1. Press **HOME** button to access the home page.
2. Press **▲/▼ / ◀/▶** and **OK** button to select and enter "E-Manual" in "Apps".

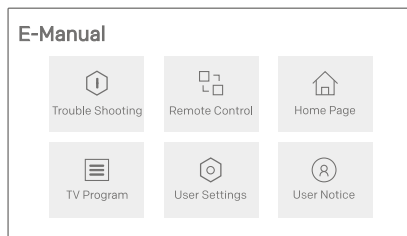

Note: The picture is only for reference.

Manual Control Button

Note: The picture is only for reference.

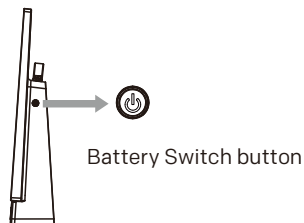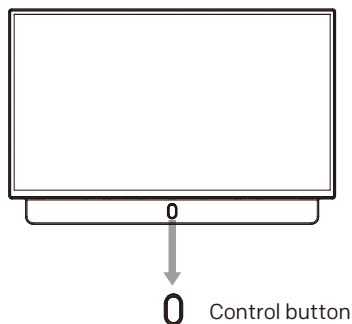

■ Turn on the Portable TV

- Connect the power cable enter the standby state, and then press the Control button or power button of the remote control to turn on the device.
- Press the Battery Switch button enter the standby state, and then press the Control button or power button of the remote control to turn on the device.

Reminder:

1. After connecting the power cord, the device enters standby and charging state. At this time, the battery switch button is inactive until the power cord is disconnected.
2. To avoid unnecessary hazards and damage to the human body and the surrounding environment caused by the lithium battery, disconnect the power cable when the device is not in use for a long time.
3. Long press the Battery Switch button to turn off the device. In battery-powered standby mode, battery power will be automatically turned off if there is no operation for 2 minutes.

TROUBLE SHOOTING

Before calling a service technician, please check the following table for a possible cause of the symptom and some solutions.

General Problem / Solution

- **Remote control does not work**
Change the batteries.
Check if batteries are installed correctly.
Check if main power is connected.
Check if there are some items between remote sensor and remote control.
- **Poor Signal**
This is usually caused by interference from electronic equipments or radio interference sources.

Picture & Sound / Solution

- **No picture, no sound**
Check the signal source.
Plug another electrical device into the outlet to check if it is working or turned on.
Check if power plug is in good contact with the outlet.
- **No sound, picture OK**
If no sound, unmute the sound or increase the volume.
Open the sound menu and adjust 'Balance'.
- **Abnormal picture**
For no color or bad picture quality, you may:
 1. Adjust the color option in menu settings.
 2. Keep the device at a sufficient distance from other electronic products.
 3. Try another channel.Bad TV signal (Display mosaic or snowflakes)
 1. Check the signal cable and adjust the antenna.
 2. Fine tune the channel.
 3. Try another channel.

Multimedia Player / Solution

- **'This file is invalid' / 'Unsupported audio' appears , or audio is normal but video is abnormal, or video is normal but audio is abnormal**
The media file maybe damaged, check if the file can be played on the PC.
Check if video and audio codec is supported.

Network / Solution


- **Network failure**
Check if the router works well.
Make sure the device has connected to the router successfully.

Browser / Solution

- **Web page can not be displayed completely**
Some third-party extensions of the current web page may not be supported, and please close the current web page.
- **Browser is forced to be shut down**
There is insufficient memory to support opening a particular web page that is causing the browser to close.

RADIO MODULE

Note: Hereby, [Shenzhen Chuangwei-RGB Electronics Co., Ltd.] declares that the radio equipment type [CGPF* Series] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.coocaa.eu.

Radio Module Specifications								
Wireless Network(WLAN)								
Frequency Band	Transmitting Power(Max.)							
2.4G: 2412 ~ 2472 MHz 2422 ~ 2462 MHz 5G: Band I: 5180~5240 MHz 5190~5230 MHz 5210 MHz (May not be available) Band II: 5260~5320 MHz 5270~5310 MHz 5290 MHz (May not be available) Band III: 5500~5700 MHz 5510~5670 MHz 5530~5610 MHz (May not be available)	<20dBm							
Bluetooth								
Frequency Band	Transmitting Power(Max.)							
2.402GHz~2.480GHz	<20dBm							
Remark: 1). The device should be positioned or operated at least 20cm away from the user. 2). Due to various sales regions, the wireless module may have different configurations which will not exceed the maximum described in this manual. 3). Restrictions or Requirements in following countries: Indoor use only within 5150-5350MHz.								
	FR	DE	UK	IT	NL	BE	LU	TR
	DK	IE	GR	ES	PT	AT	FI	LI
	SE	CY	MT	PL	HU	CZ	SK	IS
	SI	EE	LV	LT	BG	RO	HR	NO

SPECIFICATION

Working voltage:	DC 12.0V $\overline{=}$ 5.0A (Input range: 10-30V DC) AC Adapter: 100-240V~50/60Hz
Dimensions(W X H X D):	24": 548.5 x 366.2 x 74.1 mm
Net weight:	24": 4.0 kg
Language of OSD:	Multiple options
Environment (only for Tropical climates zone):	Working temperature: 5°C ~ 40°C Working humidity: 20% ~ 70% Storage temperature: -15°C ~ 45°C Storage humidity: 10% ~ 70% <i>Note: Beyond this temperature range the battery will not be usable.</i>

Some specifications may vary by region or model number, please refer to your specific model number.

LICENSE



Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Chromecast built-in and YouTube Music are trademarks of Google LLC.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.